

BELMONDO® Kingsize

prerequisites:




concrete:

- min. 10 cm thick
- no holes
- no elevations

mats:


even temperature:
min. 5° C to max. 30° C
(Store accordingly!)

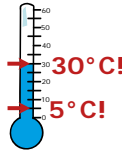


To bind fluids (urine) a small amount of absorbent bedding is always required in the loosebox.

You will need this:


measuring:

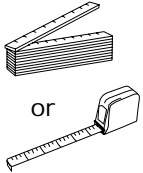


marking:



cutting:

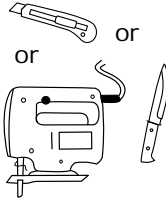

drilling and installing:

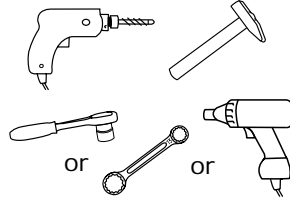

KRAIBURG fastening elements:


framing plugs \varnothing 10 x 100 mm with

- hexagon screw (SW 13) - A2
- washer \varnothing 30 mm - A2


spax screw \varnothing 5 x 60 mm

(fastening elements are part of delivery)

1 Lay out VITA Border (frame profiles)

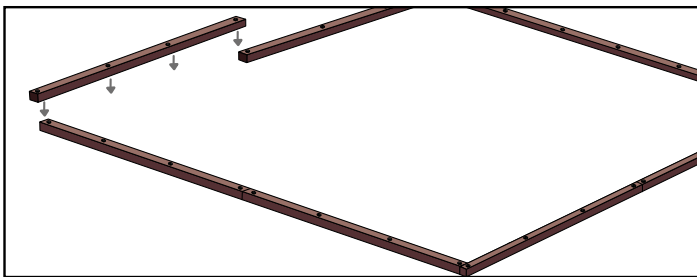


adapt frame profiles to the area to be covered

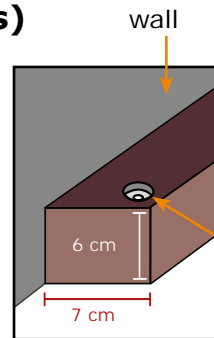


IMPORTANT:
if the frame profile is cut off, set additional drill hole and counterbore!

drill hole at the inner edge


2 Fasten VITA Border (frame profiles) through pre-drilled holes > framing plugs 10 x 100 mm

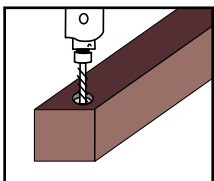

drill through pilot hole

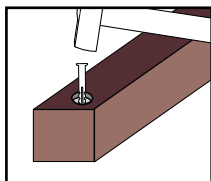


pound the plastic plugs in flush

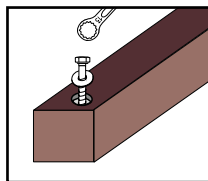

fasten screws and washers

IMPORTANT:
fasten screws until they are seated evenly fast.
Do not overtighten!


3 Fit BELMONDO® Cup (lower mats) into the assembled frame open cups on upper side

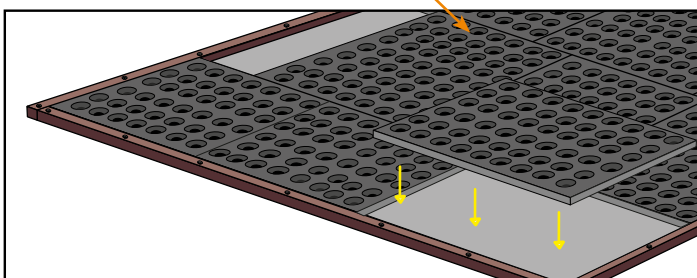

fill in complete area seamlessly with lower mats, if necessary, cut the mats to fit

IMPORTANT:
lower mats can be adjoined cross- and/or lengthwise




4 Lay out KRAI-PUR (foam) completely onto lower mats

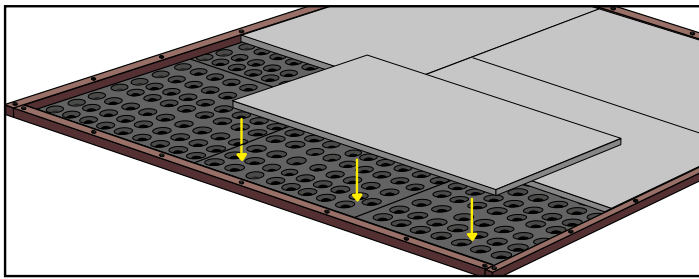

i foam can be adjoined cross- and/or lengthwise

adjoin foam mats seamlessly, if necessary, cut to fit


5 Roll out and position BELMONDO® Kingsize Cover (top covering)

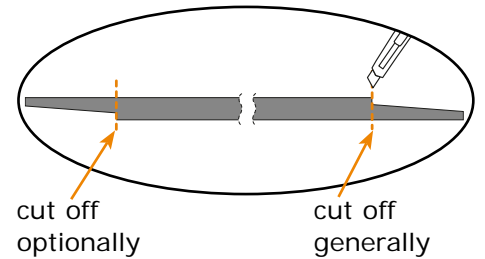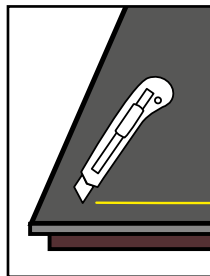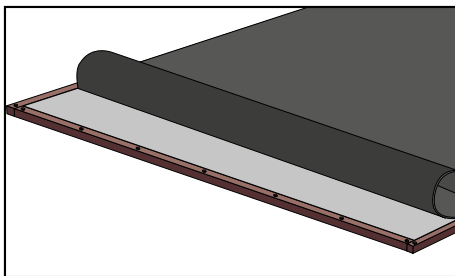

cut off overlaying mat parts at the edges


6 Fasten BELMONDO® Kingsize Cover (top covering) with VITA Top (covering strip)

A lay covering strips onto the top covering along the walls

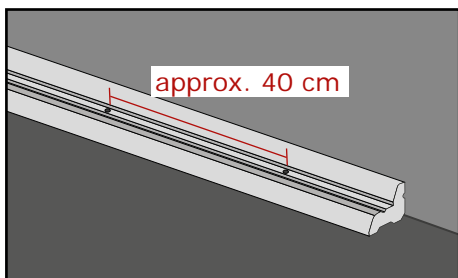

- high end outwards
- flush to wall

B fasten approx. every 40 cm
> spax screw 5 x 60 mm

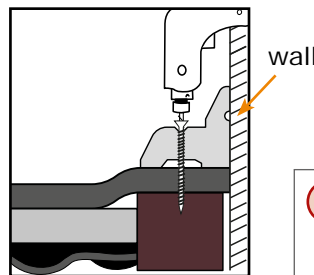

! fasten screws until they are seated evenly fast.
Do not overtighten!

Optional: the groove in the back of VITA Top can be filled with a round cord Ø 6 mm

i Appropriate installation may differ due to local conditions. Therefore the manufacturer is not liable for installation!