

BELMONDO® Kingsize

Prerequisites:




Concrete area:

- Min. 10 cm thick
- No holes
- No ridges

Mats:


Even temperature:
min. 5°C to max. 30°C
(store accordingly!)

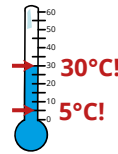


To bind liquids (urine) a small amount of absorbent bedding is always required.

You will need:


Measuring:

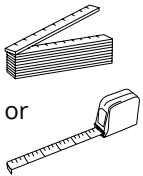


Marking:

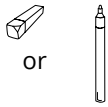

Cutting:

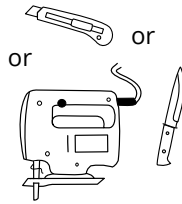

Drilling and installing:

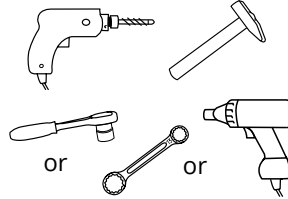

KRAIBURG fixings:

Framing plugs \varnothing 10 x 100 mm with


- Hexagon screws (AF 13) - A2
- Washers \varnothing 30 mm - A2

Spax screws \varnothing 5 x 60 mm


(Fixings are part of the delivery)



1 Install VITA Border (frame bars)

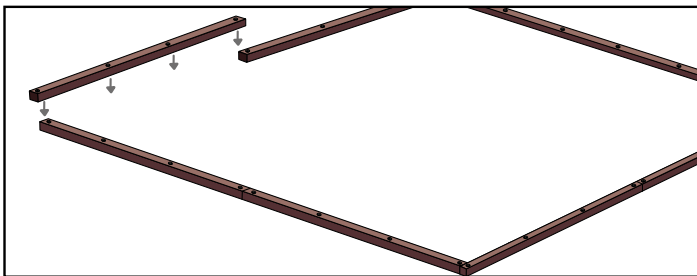

Adapt frame bars to the area being covered

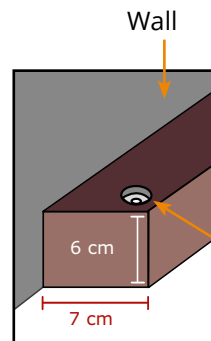


IMPORTANT: If the frame bar is cut off, drill and countersink an additional hole!


Drill hole into the inner edge

2 Plug and fix VITA Border (frame bars) through the pre-drilled holes


> Framing plugs 10 x 100 mm

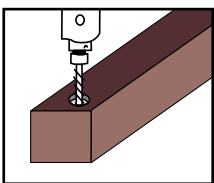

Drill through the pilot hole

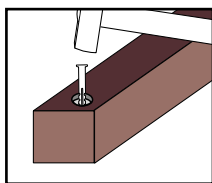

Knock the plastic plugs in flush

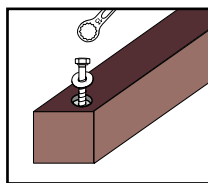


Tighten screws and washers

IMPORTANT: Tighten screws until they are seated evenly and firmly. Do not overtighten!

3 Insert BELMONDO® Cup (lower mats) into the installed frame


Open cups on upper side

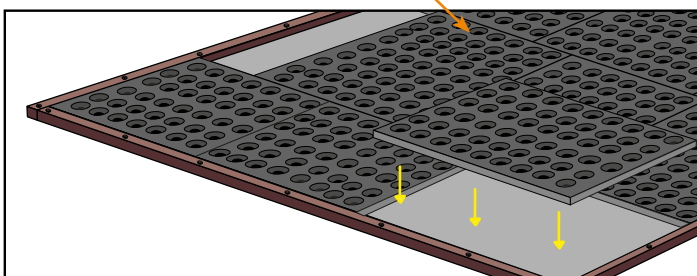

Information: Lower mats can be installed crosswise and/or lengthwise.

Install the lower mats jointless throughout the whole area; if necessary, cut the mats to fit




4 Install KRAI-PUR (foam) fully across the lower mats

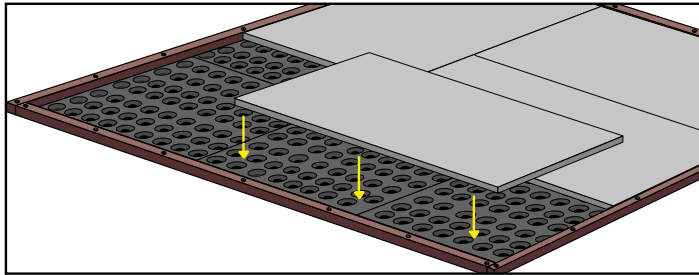

i Foam parts can be installed crosswise and/or lengthwise.

Lay the foam mats next to each other jointless; if necessary, cut individual pieces to fit


5 Roll out and position BELMONDO® Kingsize Cover (top covering)

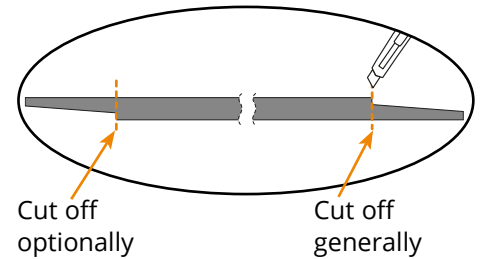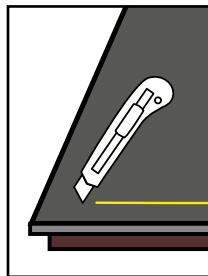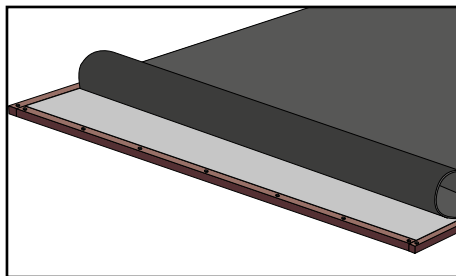

Cut off overlaying mat parts at the edges


6 Fix BELMONDO® Kingsize Cover (top covering) with VITA Top (covering strip)

A Lay covering strips on the top covering along the walls

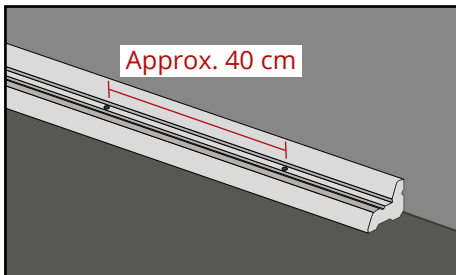

- High end at edge
- Flush to wall

B Fix every 40 cm in the position groove > Spax screws $\varnothing 5 \times 60 \text{ mm}$

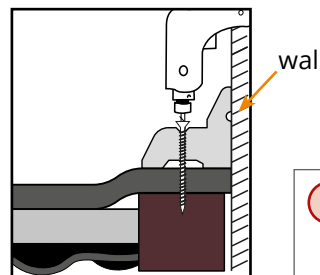

! Tighten screws until they are seated evenly and firmly. **Do not overtighten!**

Optional: The joint on the back side of VITA Top can be filled with a round cord $\varnothing 6 \text{ mm}$

i Appropriate installation may differ due to local conditions. Therefore, the manufacturer shall not be liable for installation!