

## BELMONDO® fixing

### Prerequisites:




#### Concrete area:


- Min. 10 cm thick
- No holes
- No ridges

#### Mats:

Even temperature:  
min. 5°C to max. 30°C  
(store accordingly!)

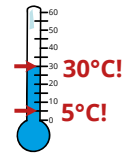

### You will need:




#### KRAIBURG fixings:


- Nail plugs  $\varnothing$  10 x 80 mm - A2
- Washers  $\varnothing$  30 mm - A2

(or fixings with at least the same strength and durability)



### Fix mats:

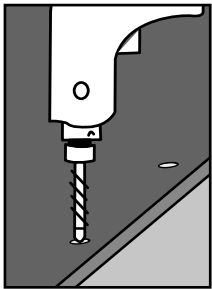


Drill

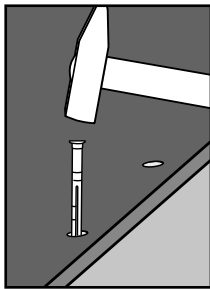

Knock plastic plugs  
in flush

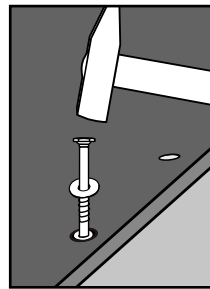
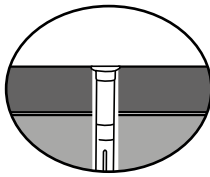


Knock in nails and washers until they are  
seated evenly and firmly and are slightly  
countersunk

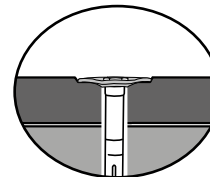

#### Tip:

Check if the fixing can be felt by sliding a flat metal object (e.g. a hammer) over it. If the fixing can still be felt, knock it in deeper!

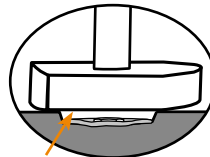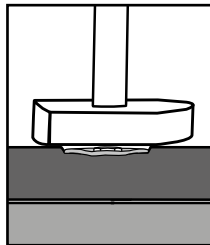


A small gap  
should be  
visible



#### Do not knock in too deep!

Tension should  
not develop,  
the mat should  
not bulge!

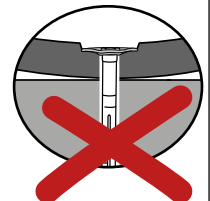

Appropriate installation may differ due to local conditions.  
Therefore, the manufacturer shall not be liable for installation!